

# Dustless Hose Connection Guide • HEPA • W/D • Backpacks

Choose Your Vacuum

Choose Your Hose

Choose Your Adapter

Choose Your Shroud

Wet+Dry Vac

D1603



14251 ~ 1.5" x 12'



H0946 ~ 1.5" x 25'



H0036 ~ 1.5" x 50'



D5155 ~ 18"

D5160 ~ 6'

Adapter Hose



N1414

2.25" x 1.25" x

1.75"

Stepped Adapter



14311

1.5" x 1.5"

Swivel Cuff



HEPA Wet+Dry Vac

D1606



HEPA Backpack

15505



**No Longer in Production**

**INCLUDED ACCESSORIES**



15535



15538



15543



15539



13242

**ADD-ON ACCESSORIES**



15534



*D1506 Hose Replacement  
Reqd. for Sander Use*

HEPA Backpack

D1505



**NEW**

**INCLUDED ACCESSORIES**



D1506



D1508



H0134



D1512



13242

**ADD-ON ACCESSORIES**



14169  
Reqd.



D1511



D1507



D1510

Wet+Dry Vac

D1603



HEPA Wet+Dry Vac

D1606



7" CutBuddie

7" DustBuddie

### 2" Port; Gas Powered Saw


Wet+Dry Vac

D1603



HEPA Wet+Dry Vac

D1606

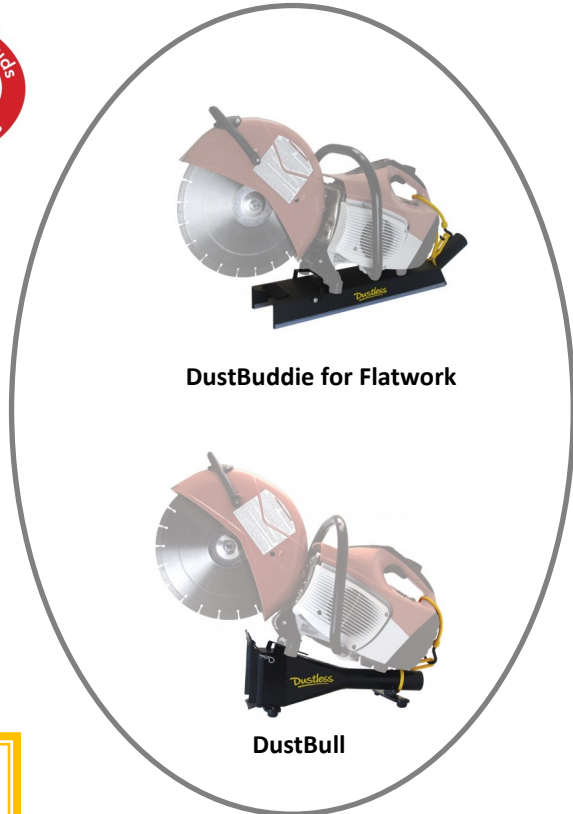

DustBuddie for Flatwork

DustBull

*\*See [Dustlesstools.com/osha](http://Dustlesstools.com/osha) for more Info*

Slurry Vac

1.5" Port (Wet Only)



14251 ~ 1.5" x 12'  
H0946 ~ 1.5" x 25'



H0944

DustDroid 300

2" or 2 1/2" Port  
(Dry Only)



H0072  
2" x 25'



B0348  
1.5-2" Cuff



H0139

H0138

DustDroid 600

3" Port (Dry Only)



H0038  
2 1/2" x 25'



B0339  
3" x 2" x 2"



DustPro 600

3" Port (Dry Only)



H0037  
3" x 25'



H0943

1 1/2" Port S Floor Wand Kit

1.5" Port Floor Wands

2" Port Floor Wand